



Tyre Pressure

How to Check Your Tyre Pressures

You can find your recommended tyre pressures inside your vehicle manufacturer's handbook.

Write the correct tyre pressures below and keep this leaflet handy.

Tyre pressures should be checked when the tyres are cold, or if they are hot add 4 to 5 psi (0.3 bar) to the recommended pressure. Do not deflate hot tyres.

Check tyre pressures monthly and before any long trip, and correct as necessary. Check the spare tyre as well, as it may be needed in an emergency.

Front		Rear
psi / bar *	Standard Loads	psi / bar *
psi / bar *	Laden	psi / bar *

* Delete as necessary

Remember to check your tyres regularly.



Safety and the Environment

Correct tyre pressure is vital for your safety and for correct vehicle operation.

Over inflation wears out the centre of the tyre tread, reduces road grip and decreases vehicle handling.

Under inflation causes tyre damage, uneven wear and increases fuel consumption which is bad for the environment.

If you carry a load which is heavier than usual or plan to tow a caravan or trailer, adjust your tyre pressures according to your vehicle manufacturer's instructions.

For further information contact your local Michelin tyre dealer or visit: www.michelin.co.uk