

ACCUTIRE[®]

EXTEND THE LIFE OF YOUR TIRES!

SPECIFICATIONS:

Range: 5~60 PSI

Accuracy: $\pm 1.5\% \pm 0.1$ PSI

Resolution: 0.1 PSI

Power: 3xLR44 1.5V Battery
(replaceable)

Blue backlight

OPERATING INSTRUCTIONS

1. Remove battery tab before 1st use. Pull tab to remove, gauge is now ready for use.
2. Press the ON button to activate the tire gage.
Note: If air/pressure left in the gauge, "bL" (short for "bleed") will appear on display and blink for about 3 seconds. Then the reading of the actual remained pressure inside the gauge/hose appears. Release the air by pushing the bleed button at the end of the tube.
3. Press the clip at the end of the pipe and push nozzle of gauge onto tire valve then release the clip. Hold the nozzle tight against the tire valve.
4. Hold pipe nozzle on valve stem until reading is shown on the display. Make sure a good seal is made between the nozzle and the escaping air is heard.

5. To switch between PSI and BAR:
 - a. When gauge is ON, press "ON" button and hold for 3 seconds.
 - b. Release the button when the desired units are shown.

Note: Gauge will turn off in 60 seconds if there is air pressure left in the gage or in 20 seconds if there is no pressure left in the gage.

6. Check your tire gauge once a week, the battery life is about 1 years based on 5 operations per day and 20 seconds each time.

REPLACING THE BATTERIES:

To replace the batteries (if display shows "Lo" – batteries been depleted)

1. Remove battery cover screws
2. Remove the batteries
3. Insert new batteries 3 LR44 1.5V batteries or equivalent. Be careful to observe the correct polarity.
4. Replace the battery compartment cover and screw in cover tightly.

Zero Set

The gauge is a precision electronic instrument and from time to time it is advisable to check the zero setting especially at extreme hot or cold temperatures.

To check the zero setting:

1. Press bleed valve button to make sure no air pressure in the gauge or pipe.
2. Press "ON" button to activate gauge. Display will show "0.0". Wait until gauge is shut off.
3. Your Accutire Tire Gauge has now been recalibrated.

What to do if:

1. You do not get any reading at all (either blank display or all zeros)
 - See the instructions and follow them carefully.
 - If gauge still does not work, see Warranty and Service section.
2. You observe an unusually high and low reading
 - Make sure you are checking the pressure on cool tires which have not been driven on for several hours.

Warranty and service

Measurement Ltd., Inc warrants this product against defects in material or workmanship for a period of five (5) years from the date of purchase and agrees to replace it free of charge. This warranty does not cover damage resulting from misuse or abuse of the product. Should your product require service, you may send it back to Measurement Ltd., Inc for repair or replacement.

Our authorized service center address:
11751 Rock Landing Drive Suite H-7 Newport
News, Virginia 23606 U.S.A.
Attn: Customer Service
Made in China



Measurement Ltd., Inc.
www.measurement-ltd.com